



Introduction

USB 4 in 1 condenser microphone

Choosing the right microphone is easy when you look at the unique features and design of LOKI.

Key Features

- ▶ USB connection works on any computer, laptop or compatible gaming system
- ▶ 4 recording patterns: cardioid, bidirectional, stereo and omnidirectional
- ▶ Zero latency 3.5mm headphone output with level control
- ▶ Microphone GAIN level control to get the best performance
- ▶ Microphone MUTE switch for when you don't want to be heard
- ▶ Robust all metal construction built to last
- ▶ Built-in LED lighting select from 5 colours to suit your mood
- ▶ Unique tabletop stand looks great on any table or desk

What's in the box


- 1 x LOKI Microphone + Stand
- 1 x 1.8m USB C to USB A Cable
- 1 x User Guide

Specifications


MODEL NAME	LOKI
Element	3 custom elements
Polar pattern	uni / bi / stereo / omni directional
Frequency Response	18Hz - 22kHz
Sensitivity	5.2mV/Pa (at 1kHz)
Max input SPL	120dB at 1kHz 0.5% THD
S/N ratio	100dB
THD	0.01%
Output impedance	16 ohms
Sampling rate	16/24bit / 44.1-192kHz
ADC / DAC	Stereo
Data transmission	USB 2.0
Compatibility	Microsoft Windows, Apple Max OS X

Operating Steps

1

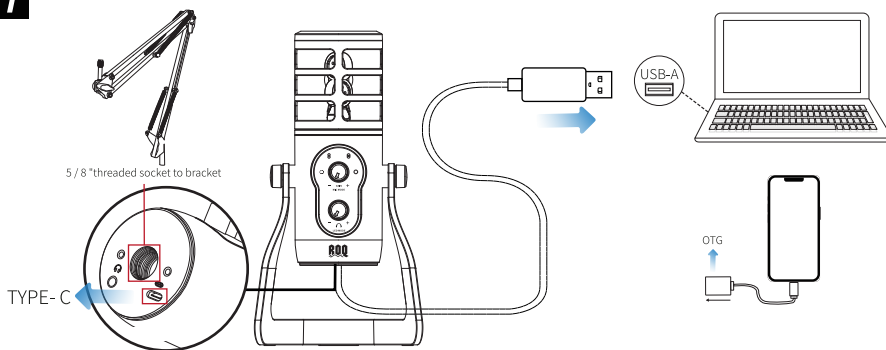


2

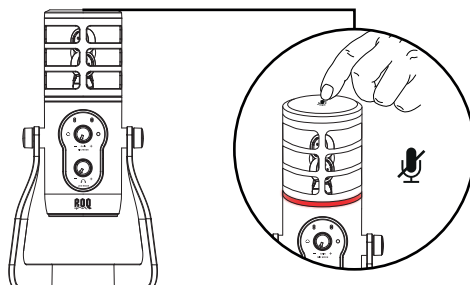


Operating Steps

3

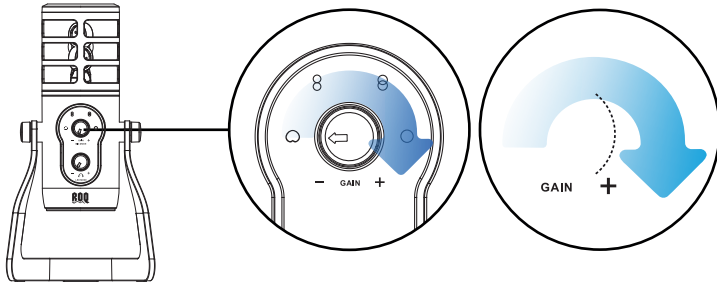


4


CARDIOID

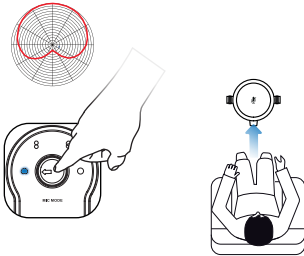


BI DIRECTIONAL

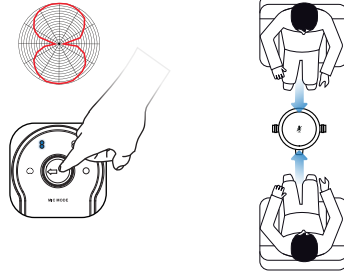


STEREO

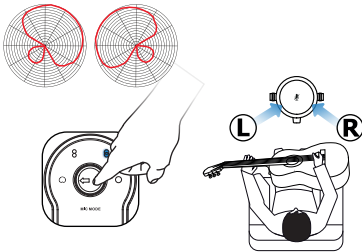

OMNI DIRECTIONAL

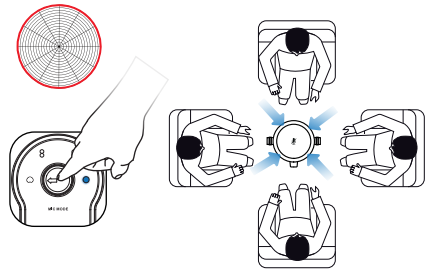


5

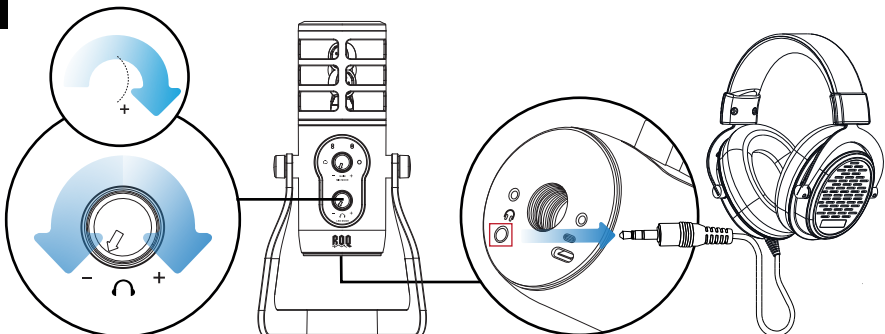

Operating Steps

6

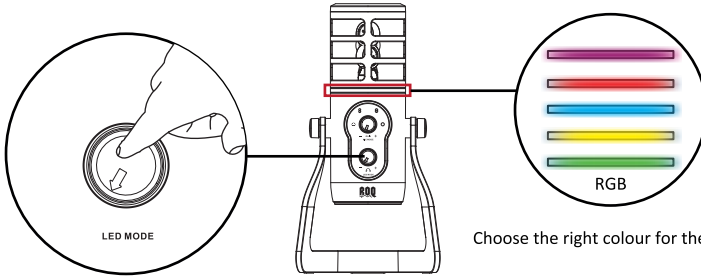

Choose the right colour for the right mood


Preliminary Setup With Windows Vista

1 Plug the free end of the provided USB cable into the USB port on your computer . Your computer will automatically recognize the USB device.

2 START menu > Control Panel > Sound
To select the LoKI Microphone as your default recording device , begin at your START menu . Select Control Panel.

3 Select (Double-click) Sound.

4 Select the Recording tab. Make sure that the LoKI microphone is set as the default recording device .(You should see a green check mark beside the USB microphone icon.)

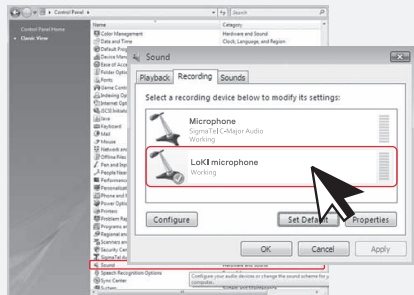


Your preferences are now set to use the LoKI with Windows Vista with the recording programme of your choice.



Preliminary Setup With Windows 7/10

1 Plug the free end of the provided USB cable into the USB port on your computer. Your computer will automatically recognize the USB device.

2 START menu > Control panel > Sound
To select LoKI Microphone as your defarding device , begin at your START menu. Select Control Panel.

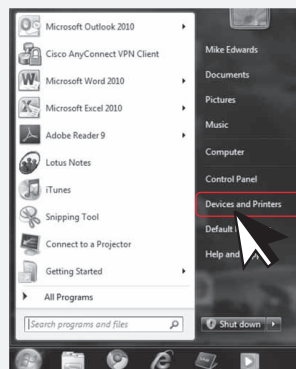

Preliminary Setup With Windows 7/10

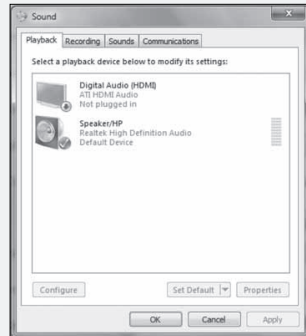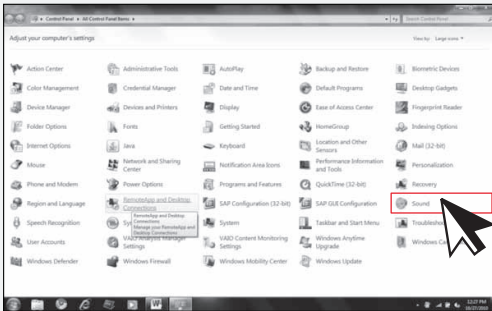


3 Select Sound.

4 The following screen will pop up.

5 Select the Recording tab , and choose LoKI Microphone as the default device.

6 Double click on the LoKI icon to open the Microphone Properties window. Select the levels tab to adjust microphone level (loudness). You may need to come back to this window to readjust the level after you begin recording.

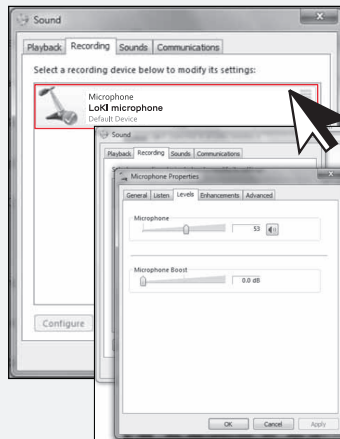

Your preferences are now set to use the LoKI with Windows 7/10 with the recording programme of your choice.


Preliminary Setup With Mac Os X



1 Plug the free end of the provided USB cable into the USB port on your computer . Your computer will automatically recognize the USB device.

2 To select the LoKI as your audio input , first open your System Preferences.

Note : Many recording software programmes are available online. Audacity is a widely used free software for recording and editing sounds.

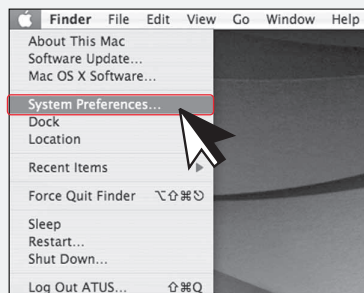


Preliminary Setup With Mac Os X



3 Next , click Sound to display the Sound preference panel.

4 Click the input tab and select the LoKI Microphone as the device for sound input.

Your preferences are now set to use the LoKI on your Mac with the recording programme of your choice.

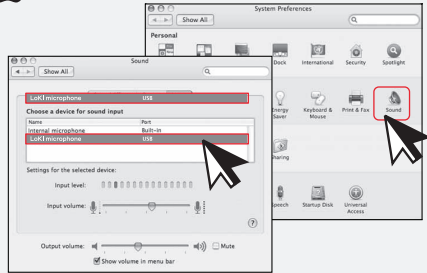

Preliminary Setup With Mac Os X



1 Plug the free end of the provided USB cable into the USB port on your computer . Your computer Will automatically recognize the USB device.





2 To select the LoKI Microphone as your default recording device ,begin at your START menu.

3 Select Control Panel.

4 Select Sounds and Audio Devices.

5 Adjust computer volume by clicking on the Volume button beneath the Sound recording default device.

6 Through the Wave In window , you can set the computer volume or mute the microphone.

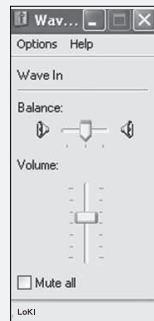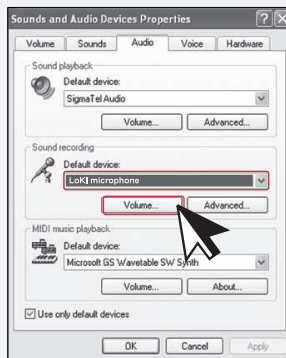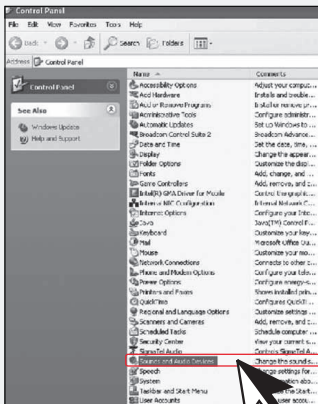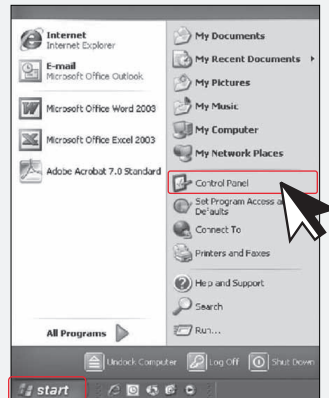

Your preferences are now set to use the LoKI With the Windows , and with the recording programme of your choice.